


lorsque touche pressée → CN29P doit suivre cross point et CN30D lorsqu'il est "LOW"

(c'est l'état vérifié)

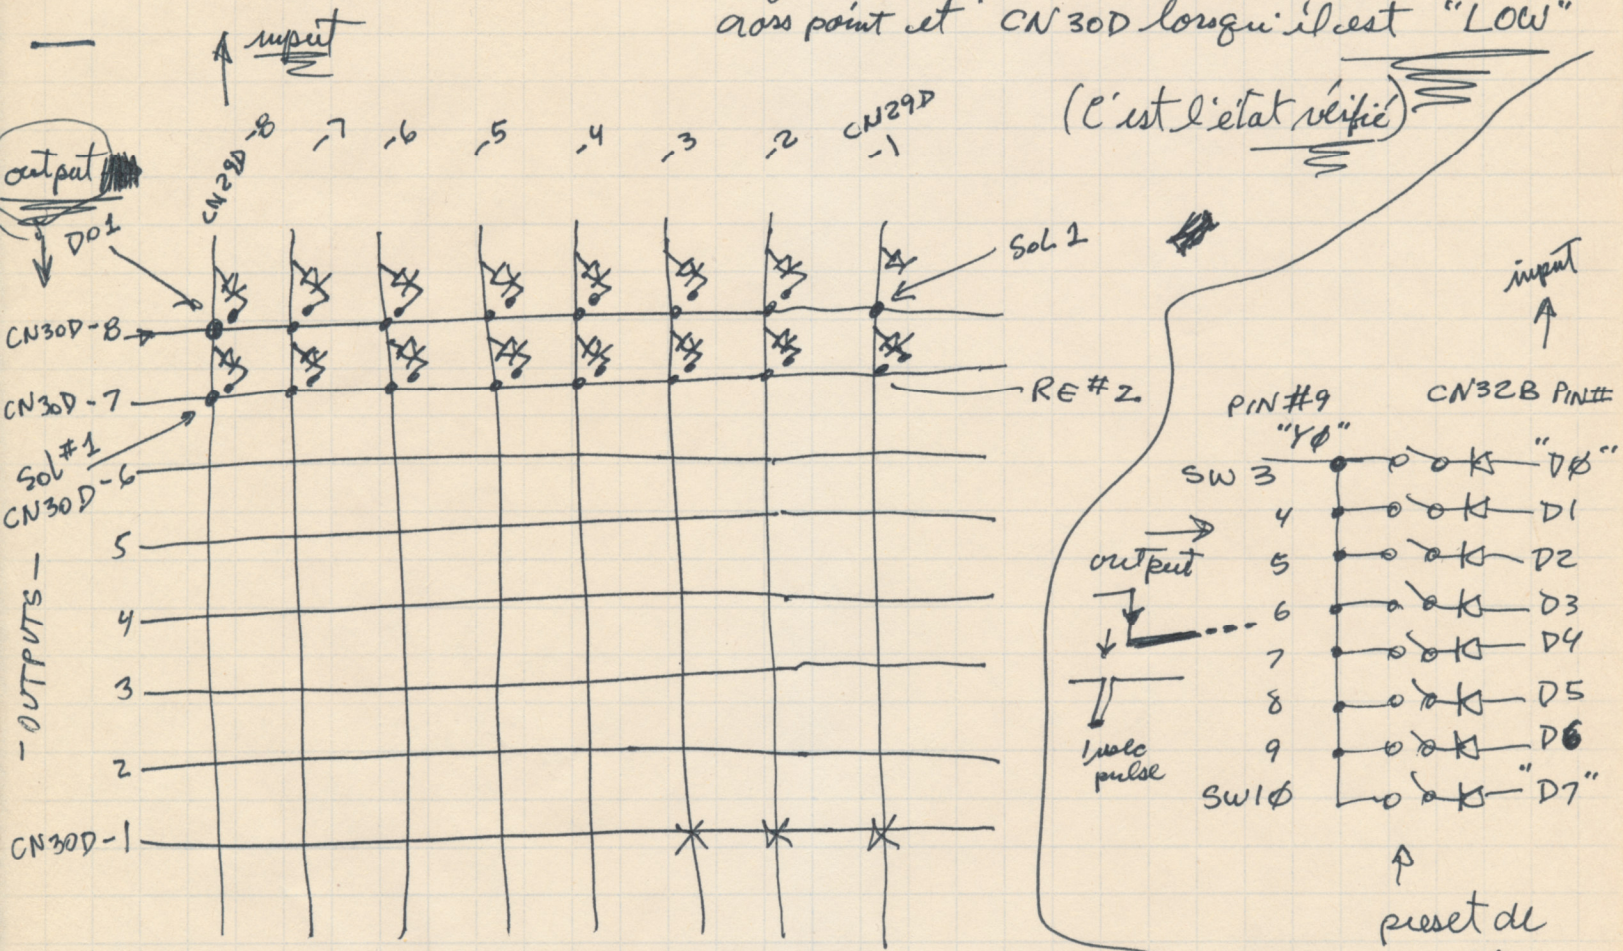

note min = 18 = 24 dlii  
note max = 34 = 44 des

Do 1	Do#1	RE 1	RE#1	MI 1	FA 1	FA#1	SOL 1
Sol#1	LA 1	LA#1	SI 1	Do 2	Do#2	RE 2	RE#2
MI 2	FA 2	FA#2	SOL 2	Sol#2	LA 2	LA#2	SI 2
Do 3	Do#3	RE 3	RE#3	MI 3	FA 3	FA#3	SOL 3
Sol#3	LA 3	LA#3	SI 3	Do 4	Do#4	RE 4	RE#4
MI 4	FA 4	FA#4	SOL 4	Sol#4	LA 4	LA#4	SI 4
Do 5	Do#5	RE 5	RE#5	MI 5	FA 5	FA#5	SOL 5
Sol#5	LA 5	LA#5	SI 5	Do 6	Do#6	RE 6	RE#6
<del>MI 6</del>	<del>FA 6</del>	<del>FA#6</del>	<del>SOL 6</del>	<del>Sol#6</del>	<del>LA 6</del>	<del>LA#6</del>	<del>SI 6</del>

reset de son.

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8